CLEANING AND DISINFECTING PEDICURE CHAIRS AND THE REMOVABLE PARTS

K.A.R. 28-24-9

EACH PRACTITIONER SHALL ENSURE THAT ALL PEDICURE EQUIPMENT REMAINS IN A CLEAN AND DISINFECTED CONDITION.

Disclaimer: This information is provided as a public service to enhance public education. It is not intended to take the place of statutory law, regulations, or guidance documents. Such information is subject to change. This information is not legal advice, therefore, if you have additional questions or need clarification, please consult with your own legal counsel for assistance or legal advice.

STEPS TO CLEAN AND DISINFECT PEDICURE EQUIPMENT

PEDICURE EQUIPMENT IS ANY APPARATUS THAT HOLDS WATER FOR THE PURPOSE OF PEDICURE SERVICE.

EACH PRACTITIONER SHALL PERFORM THE FOLLOWING STEPS IMMEDIATELY AFTER EACH PEDICURE SERVICE:

- 1. DRAIN THE PEDICURE EQUIPMENT OF ALL WATER, REMOVE ALL DEBRIS FROM THE EQUIPMENT, AND REMOVE ALL REMOVABLE PARTS.
- 2. IF A PEDICURE LINER WAS USED DURING THE PEDICURE SERVICE, DISPOSE OF THE PEDICURE LINER IN A COVERED WASTE RECEPTACLE.
- 3. CLEAN ALL REMOVABLE PARTS AND THE SURFACES AND WALLS OF THE PEDICURE EQUIPMENT, INCLUDING THE INLET AND ALL DEBRIS TRAPPED BEHIND ANY REMOVABLE PARTS, WITH SOAP OR DETERGENT, RINSE WITH WARM POTABLE WATER, AND DISINFECT WITH A LIQUID DISINFECTANT USED ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.
- 4. REPLACE ALL CLEAN REMOVABLE PARTS.
- 5. WIPE THE PEDICURE EQUIPMENT DRY WITH A CLEAN TOWEL.


STEP 3 CLARIFICATION REGARDING CIRCULATING VS. NONCIRCULATING PEDICURE CHAIRS

CIRCULATING

• IF THE PEDICURE EQUIPMENT IS CIRCULATING, FILL THE PEDICURE EQUIPMENT WITH POTABLE WATER AND CIRCULATE A BLEACH SOLUTION OR A LIQUID DISINFECTANT USED ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS THROUGH THE PEDICURE EQUIPMENT FOR 10 MINUTES AND THEN DRAIN AND RINSE THE PEDICURE EQUIPMENT WITH POTABLE WATER.

NONCIRCULATING

IF THE PEDICURE EQUIPMENT IS NONCIRCULATING, ALLOW THE BLEACH SOLUTION OR LIQUID
DISINFECTANT TO STAND FOR 10 MINUTES AND THEN DRAIN AND RINSE THE PEDICURE EQUIPMENT
WITH POTABLE WATER.

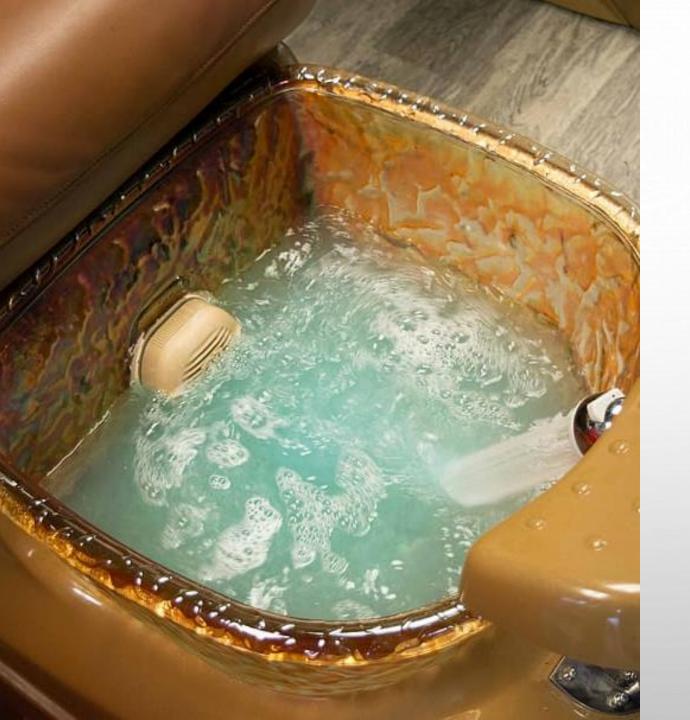

WHIRLPOOL SPAS

CIRCULATING

IF THE PEDICURE EQUIPMENT IS CIRCULATING,
FILL THE PEDICURE EQUIPMENT WITH POTABLE
WATER AND CIRCULATE A BLEACH SOLUTION
OR A LIQUID DISINFECTANT USED
ACCORDING TO THE MANUFACTURER'S
INSTRUCTIONS THROUGH THE PEDICURE
EQUIPMENT FOR 10 MINUTES AND THEN
DRAIN AND RINSE THE PEDICURE EQUIPMENT
WITH POTABLE WATER.

WHIRLPOOL SPAS - REMOVABLE PARTS

Removable parts should be cleaned and disinfected immediately after each service.

-INTAKE DRAWS WATER FROM THE BASIN INTO WATER PIPES.




- JETS INJECT WATER INTO THE BASIN FROM THE WATER PIPES.
- RECIRCULATING SYSTEM ALLOWS WATER, DEAD SKIN AND PRODUCT TO ACCUMULATE IN THE WATER PIPES IF NOT PROPERLY CLEANED AND THEN DISINFECTED.



PIPELESS PEDICURE CHAIRS - REMOVABLE PARTS

Removable parts should be cleaned and disinfected immediately after each service.

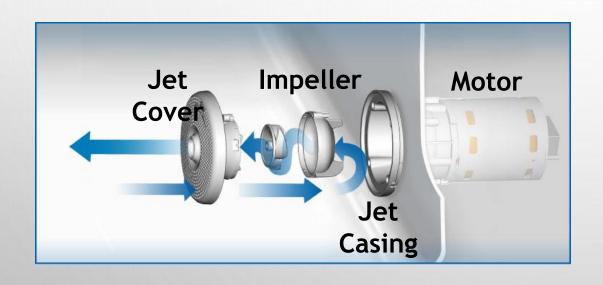



PIPELESS – MAGNETIC JET REMOVABLE PARTS

REMOVABLE PARTS SHOULD BE CLEANED AND DISINFECTED IMMEDIATELY AFTER EACH SERVICE.



Jet casing attaches to motor with a magnet.



PIPELESS - FOOTPLATE STYLE - REMOVABLE PARTS

REMOVABLE PARTS SHOULD BE CLEANED AND DISINFECTED IMMEDIATELY AFTER EACH SERVICE.



IMPELLER FORCES WATER THROUGH
THE FRONT, BACK AND BOTTOM OF
THE FOOTPLATE.

IMPELLER COVER TWISTS OFF AND IMPELLER CAN BE REMOVED.


FOOTPLATES ARE REMOVABLE.



REMINDERS

PEDICURE LINERS SHOULD <u>NOT</u> BE PLACED INSIDE THE PEDICURE BASIN UNTIL THE CLIENT HAS ARRIVED. THESE ARE SINGLE-USE ITEMS AND SHOULD BE KEPT IN A CLOSED COVERED CONTAINER UNTIL NEEDED.

PEDICURE CHAIR REMOVABLE PARTS SUCH AS MAGNET JETS, IMPELLERS AND DRAIN PLUGS SHOULD BE CLEANED AND DISINFECTED PRIOR TO REPLACING ON THE EQUIPMENT

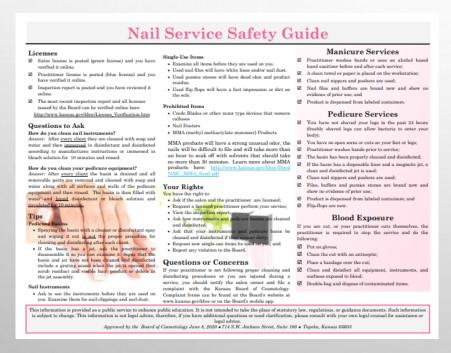

Click <u>here</u> to access the Nail Service Safety Guide available on the Board's consumer awareness page for more information on nail service safety.